

MY DIRECT BLINDS / HOW TO INSTALL

Roller fascia fitting reference

Choose the matching fitting demonstration for your 75 mm, 100 mm or double-roller fascia. Use this companion with the main roller guide.

CHILD SAFETY - STRANGULATION RISK

Loose blind chains can strangle children. Fit every supplied chain safety device before use. A loose cord must not make a loop 220 mm or longer anywhere below 1600 mm from the floor. This cord-safety rule also applies to the control chain. Keep cots, beds and climbable furniture away from the chain.

01 Start with the supplied roller system

Check which fascia was ordered before fitting its hardware. Use the matching demonstration below for the model-specific bracket orientation and fascia engagement. Keep this reference with the main roller installation guide.

PDF DOWNLOAD

Single roller installation guide



<https://mydirectblinds.com.au/wp-content/uploads/mdb-installation-guides-v2/roller-blinds-installation.pdf>

PDF DOWNLOAD

Double roller installation guide



<https://mydirectblinds.com.au/wp-content/uploads/mdb-installation-guides-v2/double-roller-blinds-installation.pdf>

CHILD SAFETY - STRANGULATION RISK

02 Secure every control chain

Loose blind chains can strangle children. Fit every supplied chain safety device before using the blind. Keep cots, beds and climbable furniture away from the chain, and retain all warning labels and tags.

A loose cord must not make a loop 220 mm or longer anywhere below 1600 mm from the floor. For these chain-controlled rollers, this cord-safety rule applies to the control chain.

Fit a chain tension device as far vertically from the control as possible, with the chain tensioned and the device fully closed. Mark its fixing hole on the architrave or wall. Use screws and anchors suited to the surface so the device cannot pull free.

If any part of the chain tension device is below 1600 mm, it must remain firmly fixed under 70 N of force in any direction for 10 seconds, with the chain tensioned to prevent a loop 220 mm or longer. Use a suitable tested fixing; get qualified help if its capacity is uncertain. Follow the supplied device instructions.

Installers must attach a label showing their name and contact details. Check the chain safety fittings regularly and keep every control chain secured.

Follow the supplied chain safety-device instructions.

03 75 mm fascia

Use this demonstration only for the supplied 75 mm fascia. Follow the bracket orientation and engagement shown for that system.

VIDEO

75 mm fascia - fitting video



<https://mydirectblinds.com.au/installation-videos/#fascia-75>

04 100 mm fascia

Use this demonstration only for the supplied 100 mm fascia. Keep its components separate from the 75 mm and double-roller hardware.

VIDEO

100 mm fascia - fitting video



<https://mydirectblinds.com.au/installation-videos/#fascia-100>

05 Double roller fascia

Use the double-roller demonstration for a supplied double fascia. Complete and check both roller installations and both chain safety devices before use.

VIDEO

Double roller fascia - fitting video




<https://mydirectblinds.com.au/installation-videos/#fascia-double>

06 Finish and check

Check that the supplied fascia and all brackets are securely engaged and that neither fabric nor control chain catches on the fascia. If the delivered hardware differs from the demonstration, contact My Direct Blinds before fitting it.

PDF DOWNLOAD

Keep this roller fascia fitting reference guide

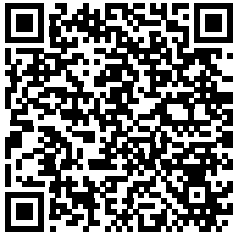

<https://mydirectblinds.com.au/wp-content/uploads/mdb-installation-guides-v2/roller-fascia-installation.pdf>